




Premium Deck Flashing Installation Guide

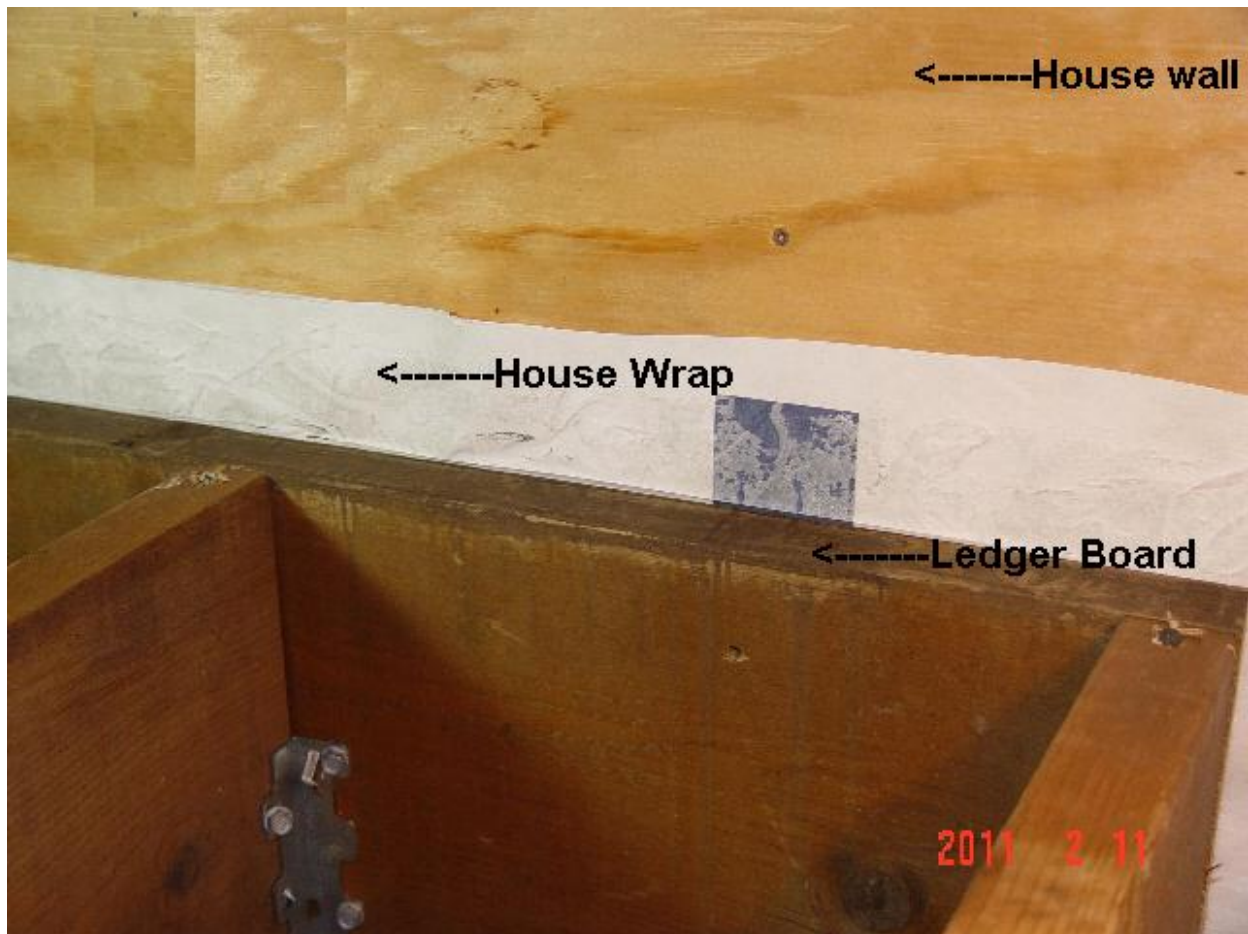


1 Install Your Ledger Board, And Then Cut the House Wrap 2" above the Ledger Board.

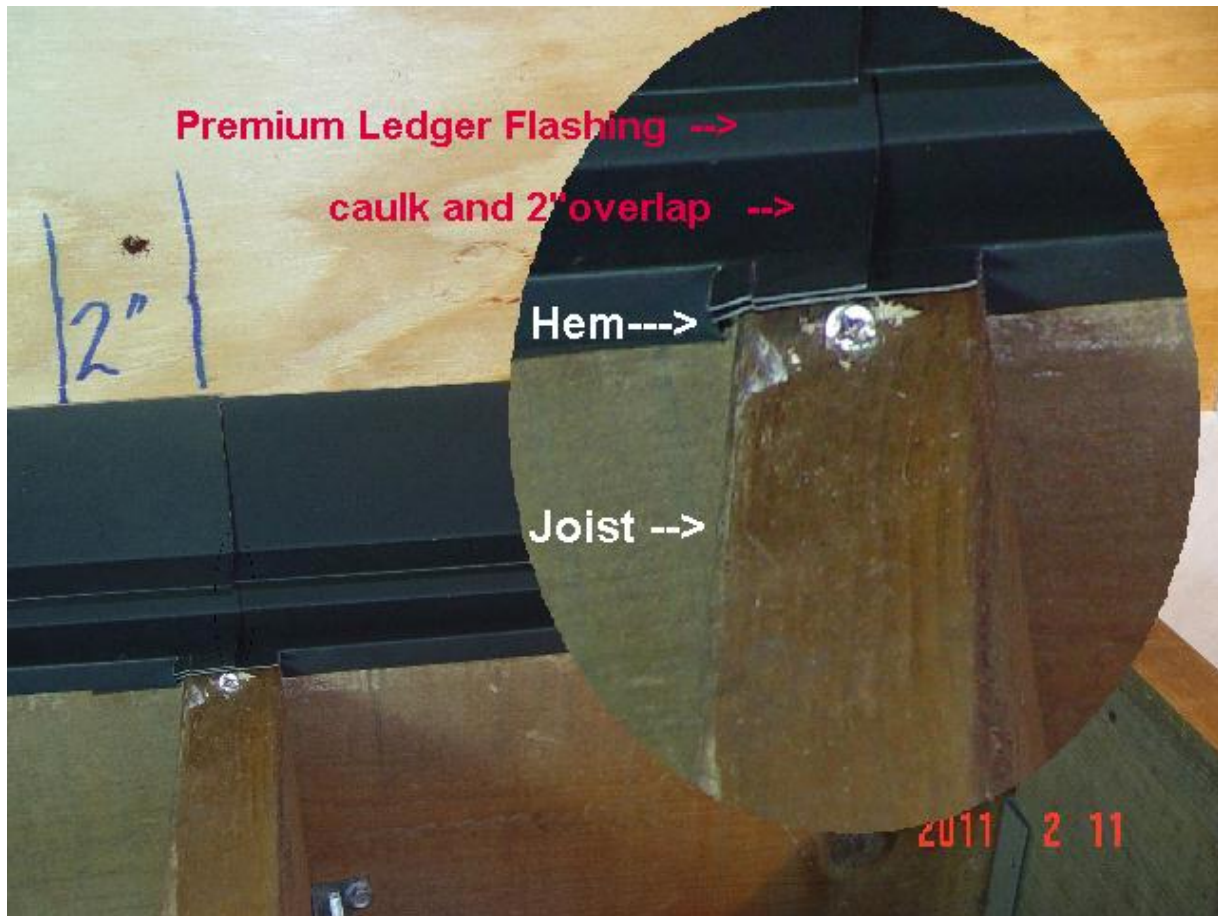

2. Put Premium Ledger Flashing on ledger board, clip hem for joist, and caulk and overlap Premium Deck Flashing a minimum of 2".

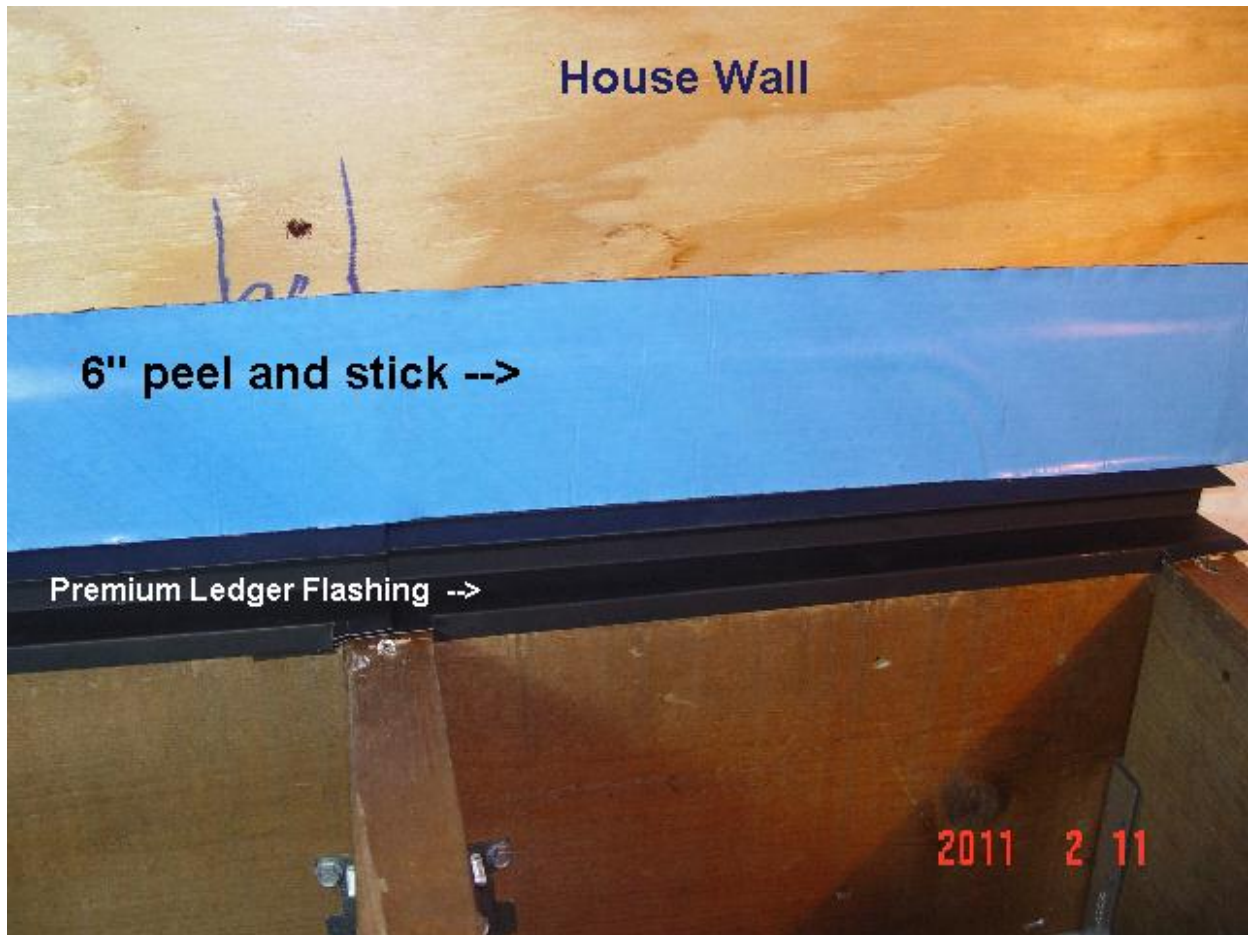


3. Use a good quality 6" peel and stick to seal the top edge of the flashing to the wall assembly.

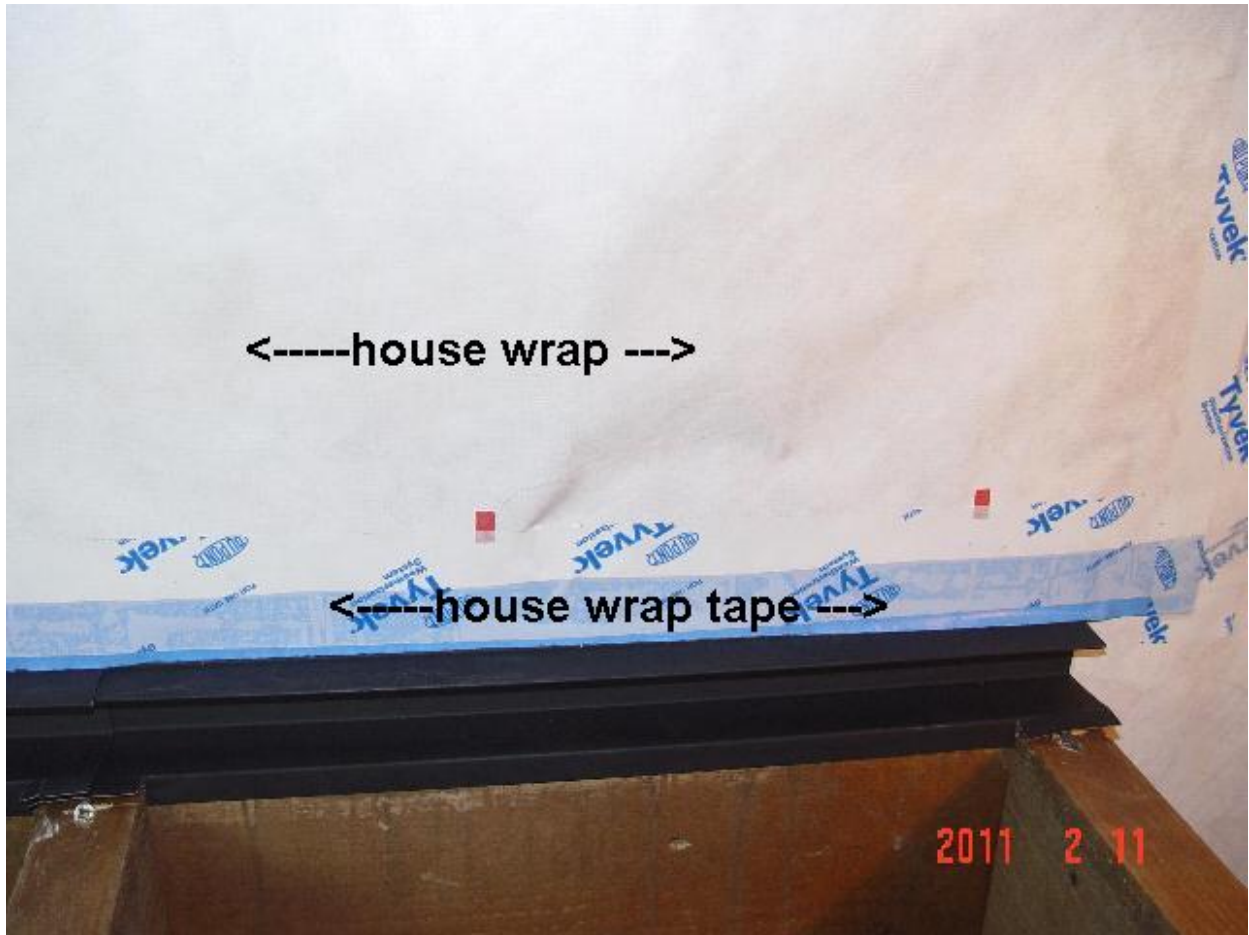


4. Bring house wrap back down over the flashing and tape with house wrap tape.

For better installation use the following directions.

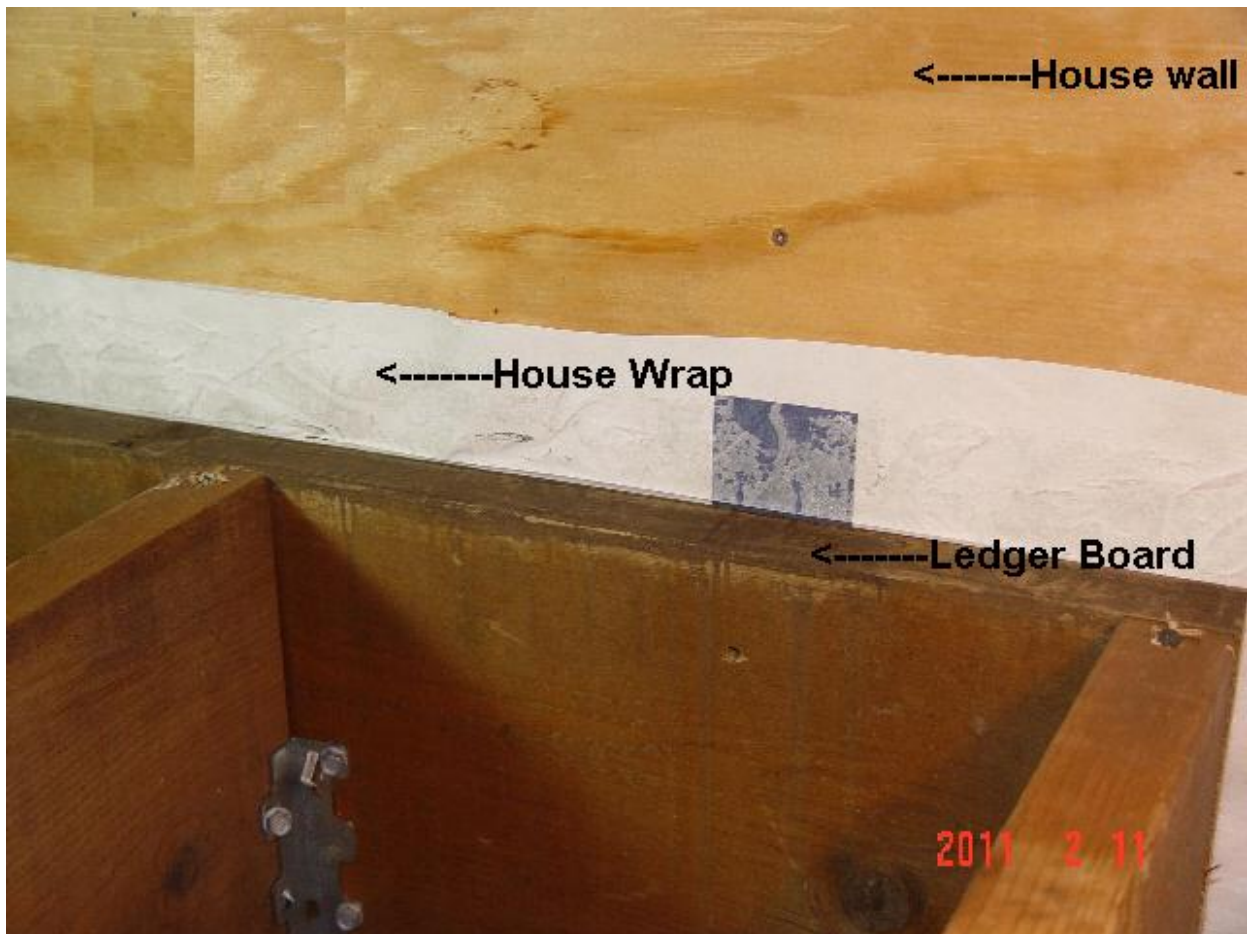

1. Install ledger board. Cut house wrap 2" above the ledger board.

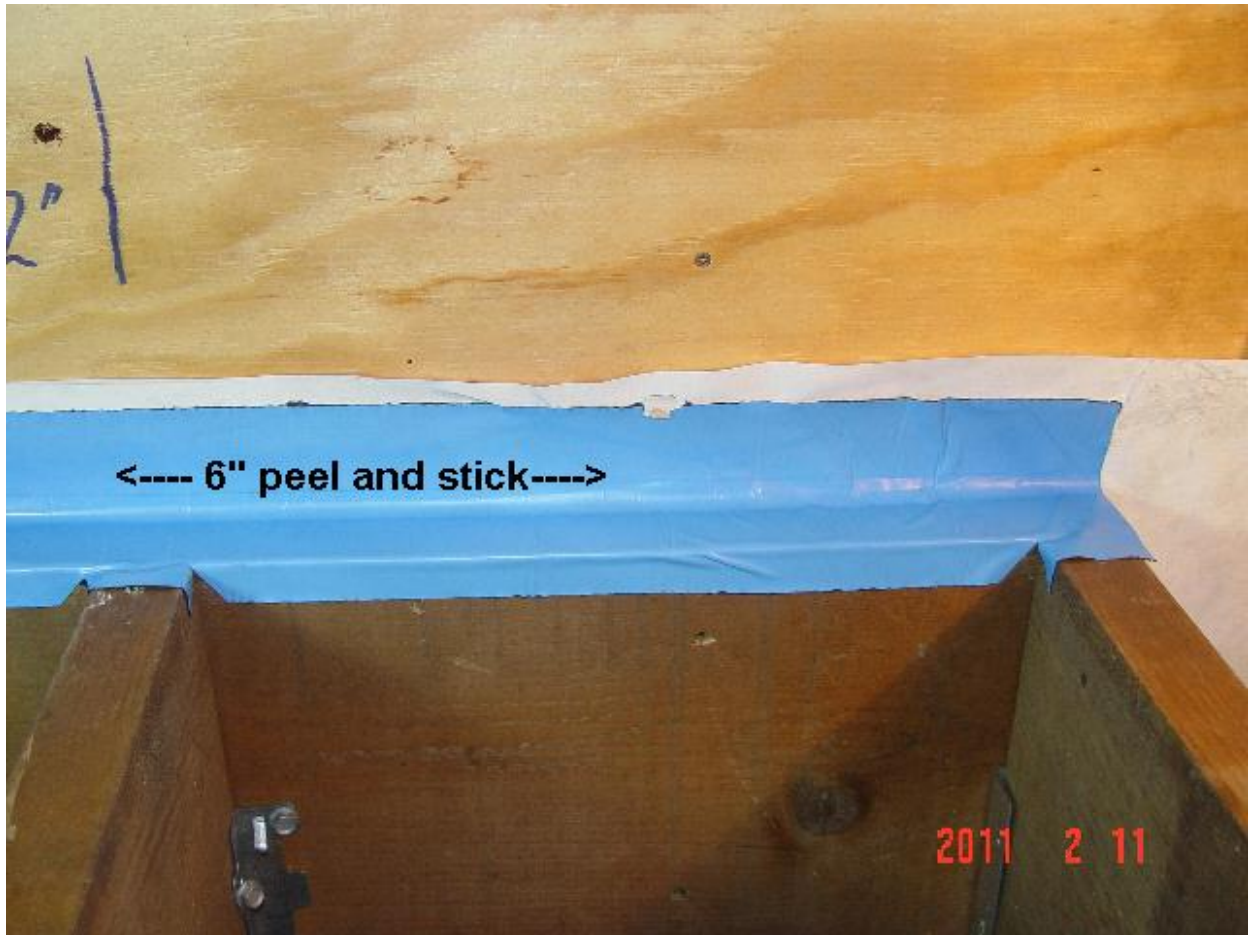

2. Install a good 6" peel and stick from the ledger board onto the wall assembly.



3 Install G-185 Galvanized Premium Deck Flashing. Make sure to overlap at least 2".





4. Use a good 6" peel and stick to seal the top of the flashing to the wall assembly.



5 Bring the house wrap down and then tape all seams with a good house wrap tape.

For the best installation use Stainless Steel PREMIUM DECK FLASHING.